

## JUPIO Fuji NP-70

Batterie JUPIO compatible Fuji NP-70

Capacité : 1250 mAh

Garantie 3 ans

Référence :CFU0008

Code barre :8717825940726



Compatible pour:

Lumix DMC-LX3S, Lumix DMC-LX3K, Lumix DMC-LX3GK, Lumix DMC-LX3EF-K, Lumix DMC-LX3, Lumix DMC-LX2S, Lumix DMC-LX2K, Lumix DMC-LX2EG-S, Lumix DMC-LX2EGM, Lumix DMC-LX2EG-K, Lumix DMC-LX2EG, Lumix DMC-LX2EF-S, Lumix DMC-LX2EF, Lumix DMC-LX2, Lumix DMC-LX1S-B, Lumix DMC-LX1-S, Lumix DMC-LX1K-B, Lumix DMC-LX1-K, Lumix DMC-LX1GN, Lumix DMC-LX1GK, Lumix DMC-LX1EG-S, Lumix DMC-LX1EG-K, Lumix DMC-LX1BS, Lumix DMC-LX1, Lumix DMC-FX9-S, Lumix DMC-FX9-R, Lumix DMC-FX9-K, Lumix DMC-FX9-H, Lumix DMC-FX9GN, Lumix DMC-FX9GK, Lumix DMC-FX9EG-S, Lumix DMC-FX9EG-R, Lumix DMC-FX9EG-K, Lumix DMC-FX9EG, Lumix DMC-FX9EF-S, Lumix DMC-FX9EF-K, Lumix DMC-FX9EB-S, Lumix DMC-FX9EBS, Lumix DMC-FX9EB-K, Lumix DMC-FX9BS, Lumix DMC-FX9BB, Lumix DMC-FX9, Lumix DMC-FX8-S, Lumix DMC-FX8-P, Lumix DMC-FX8-K, Lumix DMC-FX8GN, Lumix DMC-FX8GK, Lumix DMC-FX8EG-S, Lumix DMC-FX8EG-P, Lumix DMC-FX8EG-K, Lumix DMC-FX8EG-A, Lumix DMC-FX8EBB, Lumix DMC-FX8BS, Lumix DMC-FX8-A, Lumix DMC-FX8, Lumix DMC-FX50K, Lumix DMC-FX50EGM, Lumix DMC-FX50EG, Lumix DMC-FX50EF, Lumix DMC-FX50, Lumix DMC-FX3S, Lumix DMC-FX3K, Lumix DMC-FX3EG-S, Lumix DMC-FX3EGM, Lumix DMC-FX3EG, Lumix DMC-FX3EF-S, Lumix DMC-FX3EF, Lumix DMC-FX3, Lumix DMC-FX180S, Lumix DMC-FX180N, Lumix DMC-FX180K, Lumix DMC-FX180GK, Lumix DMC-FX180, Lumix DMC-FX150S, Lumix DMC-FX150K, Lumix DMC-FX150EFK, Lumix DMC-FX150, Lumix DMC-FX12S, Lumix DMC-FX12K, Lumix DMC-FX12GK, Lumix DMC-FX12EG-S, Lumix DMC-FX12EG-K, Lumix DMC-FX12EG, Lumix DMC-FX12EF-S, Lumix DMC-FX12EB-S, Lumix DMC-FX12EB-K, Lumix DMC-FX12, Lumix DMC-FX10S, Lumix DMC-FX10P, Lumix DMC-FX10EG-S, Lumix DMC-FX10EG-A, Lumix DMC-FX10EG, Lumix DMC-FX10EF-S, Lumix DMC-FX10EB-S, Lumix DMC-FX10EB-K, Lumix DMC-FX10A, Lumix DMC-FX100GK, Lumix DMC-FX100EG-S, Lumix DMC-FX100EG-K, Lumix DMC-FX100EG, Lumix DMC-FX100EF-S, Lumix DMC-FX100EF-N, Lumix DMC-FX100EF-K, Lumix DMC-FX10, Lumix DMC-FX07K, Lumix DMC-FX07EGM, Lumix DMC-FX07EG, Lumix DMC-FX07EF-S, Lumix DMC-FX07EF, Lumix DMC-FX07, Lumix DMC-FX01-W, Lumix DMC-FX01-S, Lumix DMC-FX01-P, Lumix DMC-FX01-K, Lumix DMC-FX01GK, Lumix DMC-FX01EG-S, Lumix DMC-FX01EG-K, Lumix DMC-FX01EG-A, Lumix DMC-FX01EG, Lumix DMC-FX01EF-W, Lumix DMC-FX01EF-S, Lumix DMC-FX01EF-K, Lumix DMC-FX01EF-A, Lumix DMC-FX01EB-W, Lumix DMC-FX01EB-S, Lumix DMC-FX01EB-K, Lumix DMC-FX01BS, Lumix DMC-FX01BB, Lumix DMC-FX01-A, Lumix DMC-FX01, Lumix DMC-FS2, Lumix DMC-FS1, HMX-R10BP, HMX-R10, GX200, G700SE, G700, G600, GR Digital IV, GR Digital III, Caplio R5, Caplio R40, Caplio R4, Caplio R30, Caplio R3, Caplio GX100, Caplio GR Digital II, Caplio GR Digital, FinePix S5700, FinePix F47FD, FinePix F45FD, FinePix F40FD, FinePix F20, D-LUX3, D-LUX2, D-LUX 4, C-LUX1