

JUPIO Nikon LB-01 | CRV3



Batterie JUPIO compatible Nikon LB-01 | CRV3

Capacité: 1400 mAh

Garantie 3 ans

Référence :CNI0006

Code barre :8717825940870

Compatible pour :

- Nikon

GX-1S, GX-1L, GX-1, Digimax V70, Digimax V6000, Digimax V6, Digimax V5000, Digimax V50, Digimax V5, Digimax V4000, Digimax V40, Digimax V4, Digimax V3, Digimax 530, Digimax 50Duo, Digimax 430, Digimax 420, Digimax 410, Digimax 401, Digimax 370, Digimax 360, Digimax 35MP3, Digimax 350SE, Digimax 3500, Digimax 340, Digimax 324, Digimax 301, Digimax 300, Digimax 250, Digimax 240, Digimax 230, Digimax 220SE, Digimax 210SE, Digimax 202, Digimax 200, Digimax 130, Digimax 101, Digimax A7, Digimax A6, Digimax A55W, Digimax A503, Digimax A502, Digimax A50, Digimax A5, Digimax A402, Digimax A400, Digimax A40, Digimax A4, Digimax A302, PDR-M700, PDR-M500, Xacti VPC-S6, Xacti VPC-S5, Xacti VPC-S4, Xacti VPC-S3, Xacti VPC-S1, Xacti VPC-R1EX, Xacti VPC-R1E, Xacti VPC-R1, Xacti DSC-S5, Xacti DSC-S4, Xacti DSC-S3, Xacti DSC-S1, Xacti DSC-R1, Prego da6, Prego da5, Prego da4, Prego da3, Caplio RR330, Caplio RR230, EXAKTA DC 3300, DCZ 5.1, DCZ 4.2, DCZ 4.1, DCZ 3.4, DCZ 3.2S, DCZ 2.2V, DCZ 2.2S, DCZ 1.3S, DC 2.1S, PDC-1050, ist, Digibino DB200, Digibino DB100, Optio S60, Optio S55, Optio S50, Optio S45, Optio S40, Optio S30, Optio 43WR, Optio 33WR, Optio 33LF, Optio 33L, Optio 330GS, Optio 30, Optio 230, SP-500, SP-350, SP-320, SP-310, FE-120, FE-110, FE-100, E-20, E-100RS, E-10, Camedia X-550, Camedia X-350, Camedia X-250, Camedia X-200, Camedia D-595, Camedia D-580, Camedia D-575, Camedia D-565, Camedia D-560, Camedia D-550, Camedia D-545, Camedia D-540, Camedia D-530, Camedia D-520, Camedia D-510, Camedia D-490, Camedia D-460, Camedia D-435, Camedia D-425, Camedia D-40, Camedia D-395, Camedia D-390, Camedia D-380, Camedia D-370, Camedia D-230, Camedia D-150, Camedia C-990, Camedia C-960, Camedia C-755, Camedia C-750, Camedia C-745, Camedia C-740, Camedia C-730, Camedia C-725, Camedia C-720, Camedia C-700, Camedia C-5500, Camedia C-55, Camedia C-5050, Camedia C-500, Camedia C-480, Camedia C-460, Camedia C-450, Camedia C-4100, Camedia C-4040, Camedia C-4000, Camedia C-40, Camedia C-370, Camedia C-360, Camedia C-350, Camedia C-315, Camedia C-3100, Camedia C-310, Camedia C-3040, Camedia C-3030, Camedia C-3020, Camedia C-3000, Camedia C-300, Camedia C-220, Camedia C-21T, Camedia C-211, Camedia C-2100, Camedia C-21, Camedia C-2040, Camedia C-200, Camedia C-2, Camedia C-1Z, Camedia C-180, Camedia C-170, Camedia C-160, Camedia C-150, Camedia C-120, Camedia C-100, Camedia C-1, Coolpix 4100, Coolpix 3200, Coolpix 3100, Coolpix 2200, Coolpix 2100, KD-220Z, KD-210Z, DiIMAGE G100, DiIMAGE F300, DiIMAGE F200, DiIMAGE F100, DiIMAGE E323, DiIMAGE E223, DiIMAGE E203, PDR-T10, QV-8000, QV-770, QV-700, QV-5700, QV-5000, QV-4000, QV-3EX, QV-3500, QV-3000, QV-300, QV-30, QV-2900UX, QV-2800UX, QV-2400UX, QV-2300UX, QV-2100, QV-2000UX, QV-200, QV-20, QV-11, QV-100, QV-10, EasyShare ZD710 Zoom, EasyShare Z885, EasyShare Z740 Zoom, EasyShare Z710 Zoom, EasyShare Z700 Zoom, EasyShare Z663 Zoom, EasyShare Z650 Zoom, EasyShare DX6440, EasyShare DX6340, EasyShare DX4900, EasyShare DX4530, EasyShare DX4330, EasyShare DX3900, EasyShare DX3700,

EasyShare DX3600, EasyShare DX3500, EasyShare DX3215, EasyShare CX7530, EasyShare CX7525,
EasyShare CX7430, EasyShare CX7330, EasyShare CX7310, EasyShare CX7300, EasyShare CX7220,
EasyShare CX6445, EasyShare CX6330, EasyShare CX6230, EasyShare CX6200, EasyShare CX4310,
EasyShare CX4300, EasyShare CX4230, EasyShare CX4210, EasyShare CX4200, EasyShare CW330,
EasyShare C875, EasyShare C813, EasyShare C743, EasyShare C703, EasyShare C663, EasyShare C653,
EasyShare C643, EasyShare C603, EasyShare C533, EasyShare C530, EasyShare C503, EasyShare C433,
EasyShare C360, EasyShare C340, EasyShare C330, EasyShare C315, EasyShare C310, EasyShare C300,
EasyShare CD50, EasyShare CD43, EasyShare CD40, EasyShare CD33