

JUPIO Nikon EN-EL10



Batterie JUPIO compatible:

Nikon EN-EL10
Casio NP-80
Kodak KLIC-7006
Olympus Li-40B/Li-42B
Pentax D-Li63
Pentax D-Li108

Capacité: 520 mAh

Garantie 3 ans

Référence :COL0002

Code barre :8717825940924

Compatible pour :

- Casio

EX-G1/ H5 // Z1 / Z2 / Z16 / Z270 / Z280 / Z330 / Z350 / Z550 / Z800 / ZS-5

- Fujifilm

FinePix Z950EXR, FinePix Z950 EXR, FinePix Z91, FinePix Z900EXR, FinePix Z900 EXR, FinePix Z90, FinePix Z81, FinePix Z808EXR, FinePix Z800EXR, FinePix Z800 EXR, FinePix Z80, FinePix Z71, FinePix Z707EXR, FinePix Z700EXR, FinePix Z70, FinePix Z37, FinePix Z35, FinePix Z33WP, FinePix Z31, FinePix Z300, FinePix Z30, FinePix Z250fd, FinePix Z20-FD, FinePix Z20FD, FinePix Z200fd, FinePix Z200, FinePix Z10-FD, FinePix Z10FD, FinePix Z100-FD, FinePix Z100FD, FinePix Z1000EXR, FinePix Z100, FinePix XP150, FinePix XP100, FinePix XP70, FinePix XP60, FinePix XP30 (GPS), FinePix XP30, FinePix XP22, FinePix XP20, FinePix XP15, FinePix XP11, FinePix XP10, FinePix T400, FinePix T350, FinePix T305, FinePix T300, FinePix T205, FinePix T200, FinePix L30, FinePix JZ505, FinePix JZ500, FinePix JZ310, FinePix JZ305, FinePix JZ300, FinePix JZ200, FinePix JZ100, FinePix JX700, FinePix JX600, FinePix JX550, FinePix JX530, FinePix JX520, FinePix JX500, FinePix JX420, FinePix JX405, FinePix JX400, FinePix JX375, FinePix JX370, FinePix JX360, FinePix JX355, FinePix JX350, FinePix JX305, FinePix JX300, FinePix JX280, FinePix JX250, FinePix JX205, FinePix JX200, FinePix JV255, FinePix JV250, FinePix JV205, FinePix JV200, FinePix JV160, FinePix JV150, FinePix JV105, FinePix JV100, FinePix J38, FinePix J37, FinePix J35, FinePix J32, FinePix J30, FinePix J27, FinePix J26, FinePix J250, FinePix J25, FinePix J210, FinePix J20, FinePix J15fd, FinePix J150W, FinePix J150, Finepix J15, FinePix J120, FinePix J12, FinePix J110W, FinePix J100, FinePix J10

- Kodak

M 530 / 550 / 575 / 580 / 873 / 883

- Nikon

Coolpix S80, Coolpix S700, Coolpix S600, Coolpix S60, Coolpix S570, Coolpix S520, Coolpix S5100, Coolpix S510, Coolpix S500, Coolpix S4000, Coolpix S3000, Coolpix S230, Coolpix S225, Coolpix S220, Coolpix

S210, Coolpix S203, Coolpix S200, Coolpix P50

- Olympus

Xacti VPC-T850, Xacti VPC-T700T, Xacti VPC-T700, Xacti VPC-T1060, Xacti VPC-E1403EX, Xacti VPC-E1403, ReefMaster DC600, Optio W30, Optio V10, Optio T30, Optio RS1500, Optio RS1000, Optio M900, Optio M90, Optio M40, Optio M30, Optio LS1100, Optio LS1000, Optio L40, Optio L36, Optio L30, EasyShare Touch, EasyShare Mini, Easyshare MD30, Easyshare M883 Zoom, EasyShare M883, Easyshare M873 Zoom, EasyShare M873, EasyShare M583, EasyShare M580, EasyShare M575, EasyShare M552, EasyShare M550, Easyshare M5370, EasyShare M532, EasyShare M530, EasyShare M522, Exilim Zoom EX-Z800, Exilim Zoom EX-Z550, Exilim Zoom EX-Z330, Exilim Zoom EX-Z33, Exilim Zoom EX-Z280, Exilim Zoom EX-Z270, Exilim Zoom EX-Z2, Exilim Zoom EX-Z115, Exilim Zoom EX-Z1, Exilim EX-S5, Exilim EX-N50, Exilim EX-N20, Exilim EX-N10, Exilim EX-N5, Exilim EX-N1, Exilim Zoom EX-Z37SR, Exilim Zoom EX-Z37RD, Exilim Zoom EX-Z37PK, Exilim Zoom EX-Z37PE, Exilim Zoom EX-Z37BK, Exilim Zoom EX-Z370, Exilim Zoom EX-Z37, Exilim Zoom EX-Z16SR, Exilim Zoom EX-Z16RD, Exilim Zoom EX-Z16PK, Exilim Zoom EX-Z16BK, Exilim Zoom EX-Z16, Exilim Hi-Zoom EX-ZS150, Exilim Hi-Zoom EX-ZS100, Exilim Hi-Zoom EX-H50, Exilim Hi-Zoom EX-H5SR, Exilim Hi-Zoom EX-H5RD, Exilim Hi-Zoom EX-H5BK, Exilim Hi-Zoom EX-H5, Exilim Zoom EX-ZS5SR, Exilim Zoom EX-ZS5PK, Exilim Zoom EX-ZS5EO, Exilim Zoom EX-ZS5BK, Exilim Zoom EX-ZS5, Exilim Zoom EX-ZS100, Exilim Zoom EX-Z800YW, Exilim Zoom EX-Z800VP, Exilim Zoom EX-Z800SR, Exilim Zoom EX-Z800PK, Exilim Zoom EX-Z800BK, Exilim Zoom EX-Z800BE, Exilim Zoom EX-Z800, Exilim Zoom EX-Z550SR, Exilim Zoom EX-Z550RD, Exilim Zoom EX-Z550PK, Exilim Zoom EX-Z550BK, Exilim Zoom EX-Z550BE, Exilim Zoom EX-Z550, Exilim Zoom EX-Z35SR, Exilim Zoom EX-Z35PK, Exilim Zoom EX-Z35PE, Exilim Zoom EX-Z35BK, Exilim Zoom EX-Z35BE, Exilim Zoom EX-Z350, Exilim Zoom EX-Z35, Exilim Zoom EX-Z33VP, Exilim Zoom EX-Z33SR, Exilim Zoom EX-Z33PK, Exilim Zoom EX-Z33BK, Exilim Zoom EX-Z33BE, Exilim Zoom EX-Z330, Exilim Zoom EX-Z280SR, Exilim Zoom EX-Z280, Exilim Zoom EX-Z270, Exilim Zoom EX-Z2, Exilim Zoom EX-Z1, Exilim Card EX-S8SR, Exilim Card EX-S8PK, Exilim Card EX-S8PE, Exilim Card EX-S8BK, Exilim Card EX-S8BE, Exilim Card EX-S8, Exilim Card EX-S7PE, Exilim Card EX-S7BK, Exilim Card EX-S6SR, Exilim Card EX-S6PK, Exilim Card EX-S6BK, Exilim Card EX-S6BE, Exilim Card EX-S5SR, Exilim Card EX-S5PK, Exilim Card EX-S5, Exilim EX-N50, Exilim EX-N5, Exilim EX-G1RD, Exilim EX-G1BK, Exilim EX-G1, ViviCam 5330, XS-10, XS-8, X-8 Sports, RCP-7325XS, Powerflex 800, Powerflex 700 Full HD, Powerflex 700HD, Powerflex 610 Full HD, Powerflex 610HD, Powerflex 600, Powerflex 500, Powerflex 470, Powerflex 460, Powerflex 455, Powerflex 450, Powerflex 440, Powerflex 400, Flexline 250, Flexline 240, Flexline 202, Flexline 200, Flexline 140, Flexline 100 InTouch, Compactline 202, Compactline 102, MD 86535, MD 86497, MD 86341, MD 86121, Life X43014, Life P43028, Life P43001, Life P43000, Life P42002, ViviCam 6330, X-970, X-960, X-935, X-920, X-915, X-905, X-800, X-795, X-790, X-785, VR-330, VR-325, VR-320, VR-310, VH-210, u770 SW, u 7050, u 7040, u 7030, u 7020, u 5010, u Tough-3000, u 850SW, u 840, u 830, u 820, u 795SW, u 790SW, u 780, u 770SW, u 760, u 750, u 740, u 730, u 720SW, u 720, u 710, u 7010, u 7000, u 700, u 5000, u 1200, u 1060, u 1050 SW, u 1040, Tough 3000, Tough TG-320, Tough TG-310, Tough 770SW, Tough 725SW, Stylus-7000, Stylus-550WP, Stylus 850 SW, Stylus 850, Stylus 840, Stylus 830, Stylus 820, Stylus 790SW, Stylus 790 SW, Stylus 780, Stylus 770 SW, Stylus 760, Stylus 750, Stylus 740, Stylus 730, Stylus 725 SW, Stylus 720 SW, Stylus 720, Stylus 710 Digital, Stylus 710, Stylus 7040, Stylus 7030, Stylus 7010, Stylus 5010, Stylus 1200, VH-210, SP-700, IR-300, FE-5500, FE-5050, FE-5030, FE-5020, FE-5010, FE-5000, FE-4050, FE-4030, FE-4010, FE-4000, FE-360, FE-350 Wide, FE-350 Grand Angle, FE-350, FE-340, FE-330, FE-320, FE-3010, FE-3000, FE-300, FE-290, FE-280, FE-250, FE-240, FE-230, FE-220D, FE-220, FE-20, FE-190, FE-160, FE-150 Zoom, FE-150, D-630 Zoom, Camedia X-600, Camedia D-630

- Pentax

Optio M90 / RS1500

Optio M30 / M40 / T30 / W30 / V10

- Praktica

Luxmedia 10-03 / 12-04 / 12-Z4 / 12-Z5

- Rollei

RCP-7325XS / XS-8 / X8-sports / XS-10 / FL100 in Touch / FL140 / FL200 / FL202 / FL240 / FL250 / CL102 /

CL202

- Sanyo

VPC - E1403 / E1500TP / T1495

- Voigtländer

Vito 65 / 75 / Vitolux S80 / S100 / Vitoret U8